仕様変更による取扱説明書の訂正

本製品はカードアダプターを変更したため、取扱説明書の内容を以下のように訂正します。

カード・アダプターについて (P.18 ～ 19)

カード・アダプターを接続する (P.18)

訂正→

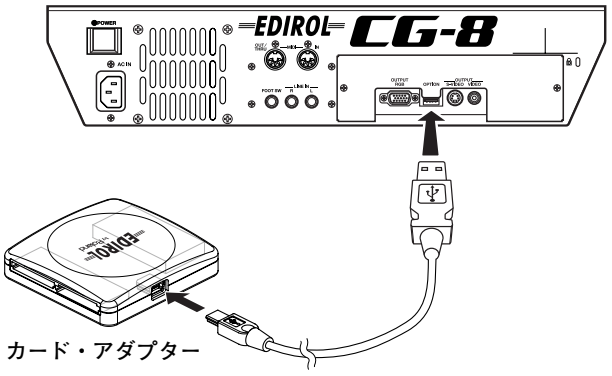

コンパクトフラッシュを挿入する／抜き取る (P.19)

コンパクトフラッシュを挿入する

訂正→

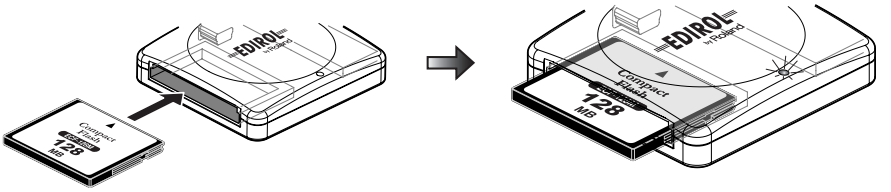

←訂正

コンパクトフラッシュを抜き取る

※ メニュー表示中にコンパクトフラッシュの抜き差しをしないでください。コンパクトフラッシュ内のデータが失われる可能性があります。

下のイラストのように、コンパクトフラッシュをカード・アダプターから抜き取ります。

訂正→

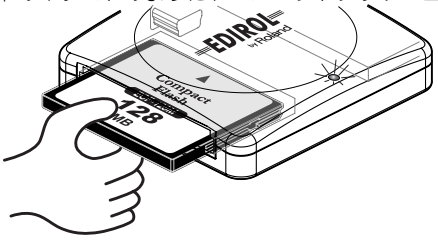

コンパクトフラッシュについて (P.20)

コンパクトフラッシュ取り扱い上のご注意

抜くとき

←訂正

コンパクトフラッシュを抜くときは、コンパクトフラッシュをつまんでまっすぐに引っ張って抜いてください。
読み込み／保存／フォーマット中は、絶対にコンパクトフラッシュを抜かないでください。
また、読み込み／保存／フォーマット中は、本機の電源を切ったり、電源コードを抜いたりしないください。コンパクトフラッシュが破損する原因となります。

© 2006 ローランド株式会社 本書の一部、もしくは全部を無断で複写・転載することを禁じます。

Revision of the Owner's Manual Due to Change in Design

The Card Adaptor for this product has been changed. Accordingly, the Owner's Manual should be revised as follows.

About the card adaptor (P.18-19)

Connecting the card adaptor

Correct >

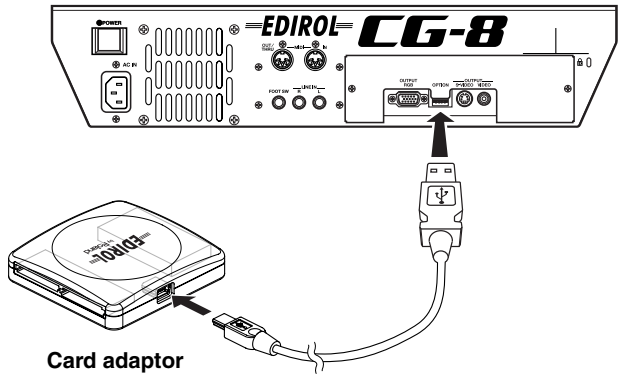

Card adaptor

Inserting/removing a CompactFlash card

Inserting a CompactFlash card

Correct >

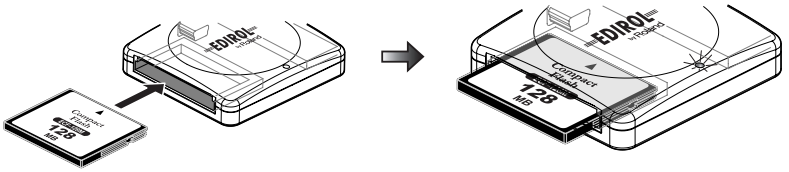

<Correct

Removing a CompactFlash card

When you insert a CompactFlash card, the button located beside the card slot will pop out.
When you press this button, the inserted CompactFlash card will pop out, allowing you to remove it.

Correct >

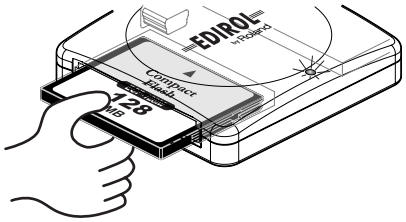

About CompactFlash cards (P.20)

Precautions concerning the handling of CompactFlash cards

When removing

<Correct

Grasp the card with your fingers and pull it straight out.
Never remove the card while loading, saving, or formatting is in progress. Also, you must never turn off the power of the CG-8 or disconnect the power cord while loading, saving, or formatting is in progress. Doing so may damage the CompactFlash card.

Copyright © 2006 ROLAND CORPORATION
All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

* 4 0 6 7 6 2 3 4 - 0 1 *